

Brake cylinder pressure on various settings

State of Charge	Minimum Reduction		Full Service		Emergency		Following an Emergency, Control Valve Goes to Release When:	
	Brake Pipe Pressure	Brake Cyl. Pressure	Brake Pipe Pressure	Aux. Res. and Brake Cyl. Pressure	Brake Pipe Pressure	Emerg. Res., Aux. Res. & Brake Cyl. Pressure	B.P.P.	Aux. Res. Pres.
90	64	10-12	64	64	0	77	66	64
85	79	10-12	60	60	0	73	62	60
80	74	10-12	57	57	0	69	58	56
75	69	10-12	53	53	0	65	54	52
70	64	10-12	50	50	0	60	50	48
65	59	10-12	47	47	0	56	46	44
60	54	10-12	43	43	0	52	42	40
55	49	10-12	40	40	0	46	38	36
50	44	10-12	36	36	0	43	33	31
45	39	10-12	32	32	0	39	29	27
40	34	10-12	28	28	0	34	24	22